



TELECO

FORCE HD CI+

USER'S MANUAL

HDMI
HIGH DEFINITION MULTIMEDIA INTERFACE



DOLBY

USB 2.0



HD Sat Receiver with CI +

Vers. 2.0

SAFETY INSTRUCTIONS	5
1. INSTALLATION OF STB	7
1.1 FRONT PANEL	7
1.2 REAR PANEL	7
1.3 CONNECTIONS	8
1.4 REMOTE	10
2. MAIN MENU	11
3. EDIT CHANNEL	11
3.1 TV CHANNEL LIST	12
3.2 DELETE ALL	13
4. INSTALLATION	13
4.1 ANTENNA CONNECTION	14
4.2 SATELLITE LIST	14
4.3 ANTENNA SETUP	15
4.4 SINGLE SATELLITE SEARCH	15
4.5 MULTI SATELLITE SEARCH	15
4.6 TP LIST	16
4.7 FAST SCAN	17
5. SYSTEM SETUP	17
5.1 LANGUAGE	17
5.2 TV SYSTEM	18
5.3 DISPLAY SETTING	18
5.4 LOCAL TIME SETTING	18
5.5 TIMER SETTING	18
5.6 PARENTAL LOCK	19
5.7 OSD SETTING	19
5.8 FAVORITE	19
5.9 OTHER	19
6. TOOLS	20
6.1 INFORMATION	20
6.2 FACTORY SETTING	20
6.3 SW UPDATE BY OTA	20
6.4 UPDATE BY USB	21
6.5 MEDIA PLAYER	21
6.6 REMOVE USB DEVICE SAFELY	21
7. GAME	21
8. OTHER FUNCTIONS INTRODUCTION	22
8.1 PROGRAM INFORMATION	22
8.2 FAVORITE LIST	22
8.3 PROGRAM GUIDE	22
8.4 VOLUME CONTROL	23
9. TECHNICAL SPECIFICATIONS	24
10. TROUBLESHOOTING	26

SAFETY CAUTION

Safety Instructions

DO NOT INSTALL YOUR RECEIVER:

- In a closed or poorly ventilated cabinet;
- Directly on top of or under any another equipment;
- On a surface which might obstruct the ventilation slots.

DO NOT EXPOSE THE RECEIVER OR ITS ACCESSORIES:

- To direct sunlight or heat generated by any other nearby equipment;
- To rain or intense moisture;
- To any shock which may cause permanent damage to your receiver;
- To any magnetic objects, such as loudspeakers, transformers, etc.;
- To intense vibration;
- Never open the cover. It is dangerous to touch the inside of the receiver due to high voltage currents and possible electrical hazards.
Your warranty will be void if the receiver has been opened.
- When the receiver is not used for a long period of time, you should unplug the power cord from the wall socket.
- Do not use a damaged power cord. It may cause a fire or an electrical shock.
- Do not touch a power cord with wet hands. It may cause an electric shock.
- Place the receiver in a well-ventilated environment.
- When you are connecting the cables, be sure that the receiver is disconnected from the mains supply voltage.
- Do not use your receiver in a humid environment.

 
Make sure you read this user manual before installing your receiver.

Main features:

- Supports MPEG-2, MPEG-4(H.264) and fully DVB-S2 compliant
- Supports Common Interface, and Common Interface Plus
- DiSEqC 1.0, 1.1, 1.2 and USALS(DiSEqC 1.3)
- Fast channel filtering by first letter of channel name
- Digital sound through coaxial output (S/PDIF)
- Display showing 4 digit channel number or time
- Max. 4,000 channels memory capacity
- 8 Favourite lists for TV-and Radio programmes
- Quick and easy installation & user-friendly menu
- Excellent Audio & Video quality
- Displayable Video Formats min. 576i, 576p, 720p, 1080i
- Parental lock function for menu selectable per channel
- Teletext via OSD & VBI
- Electronic Programme Guide (EPG) for present/following event information and up to 7 days for on screen programme information
- Full multi-lingual DVB subtitling and audio track support
- Multi-lingual support on screen menu (OSD): English, German, French, Italian, Dutch, etc.
- Edit functions for TV or Radio programme name
- Signal strength bar for digital transponders
- Automatic and manual channel scan options
- Power on with last viewed channel
- 8 Timers for on and off or sleep-timer with 3 modes (daily, weekly, once)
- User-friendly remote control with coloured function buttons
- Low power consumption in standby
- Automatically Standby mode setting after 3 hours without user activity/operation, (before going to Standby mode, there is an about 2 minutes' warning).
- Connections: LNB IN, LNB OUT, 1 Scart TV (CVBS, RGB), HDMI (HDCP), S/PDIF(Coaxial), USB2.0, CVBS+Audio L/R (Composite Audio/ Video).
- 7 segment 4 digit LED Display
- USB interface for MP3/ JPG playback and S/W update function
- S/W update through satellite supported

1. Installation of STB

1.1 Front Panel

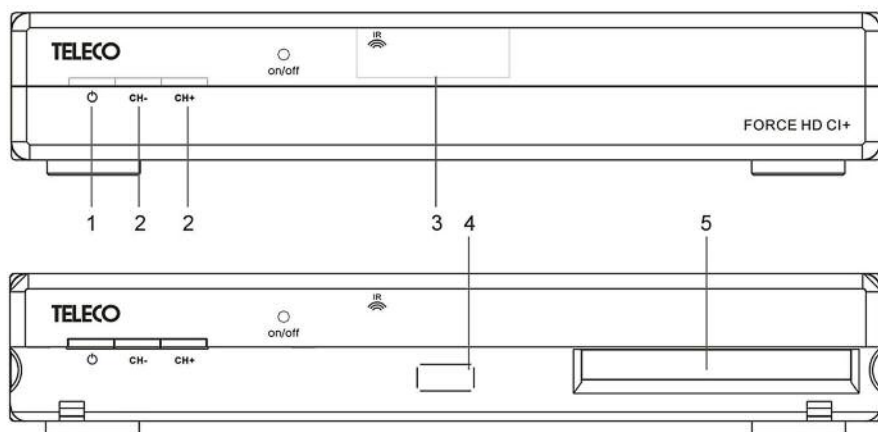

1. Standby: Used to switch the set top box to on or standby.

2. CH+/CH- Button: Changes the current channel.

 
Moves the cursor up/down in Menu state. Changes the current program to the previous/next program in No-menu state.

3. LED Display: Used to display channel information.

4. USB Port: Used to connect an external USB 2.0 Device.

5. CI+ Slot: Used to attach a CI+ Module.

1.2 Rear Panel

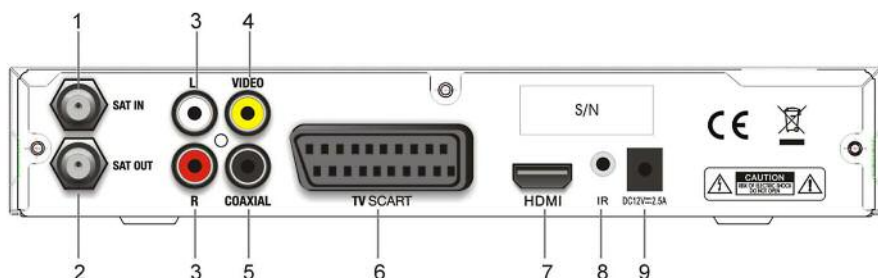

1. SAT IN

Connect the Satellite Dish LNB.

2. SAT OUT

Output loop-through LNB signal.

3. AUDIO Right and Left

These connectors can be used to connect the audio signal to an external amplifier, or the audio input of your TV.

4. VIDEO

This connector has a constant video signal for additional VCR-connections.

5. COAXIAL

Use this coaxial output to connect your receiver to the input of your digital audio amplifier.

6. TV SCART Connector

Use this connector to connect your receiver to your TV set using a SCART cable.

7. HDMI

Connecting to the HDMI input on the TV set.

8. IR

 
9. DC12V, 2.0A

1.3 Connections

Note: Before connecting this STB to other devices, power off all the devices.

• Connecting to TV

1. Connect the satellite signal from the LNB to the SAT IN connector. **AND...**
2. Connect the TV using an AV cable. **OR...**
3. Connect the TV using an HDMI cable. **OR...**
4. Connect the TV using a SCART cable.

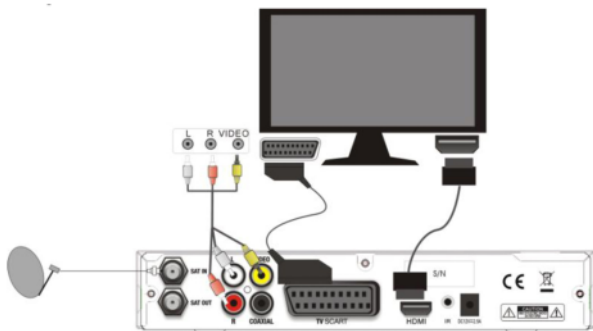


Connecting to Dish

Aiming a satellite dish and LNB to the correct longitude and Azimuth (angle of elevation) of a satellite is a specialist job, and can best be done by an official dealer.

Connecting a fixed satellite dish to your receiver


Make your choice of which satellite you want to receive your signals from, and have your dealer aim your dish at the requested satellite.

 Connect a coax cable to your LNB and the other end directly to the LNB IN connector of your receiver.

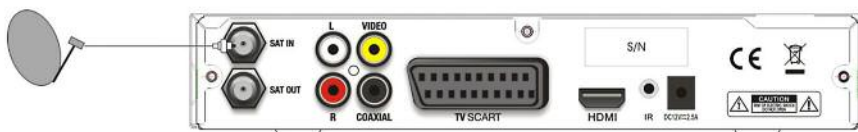


Connecting multiple fixed dishes to your receiver using a DiSEqC 1.0 switch

 If you want to watch programs from several satellites (For instance from Astra and from Hot Bird) it is advisable to use fixed dishes and a DiSEqC 1.0 switch. Have your Dealer aim the dishes at the requested satellites and connect the LNBs with coax cables to the IN connectors of the DiSEqC 1.0 switch. Connect the OUT connector of the DiSEqC 1.0 switch to the LNB IN connector at the back of your receiver.

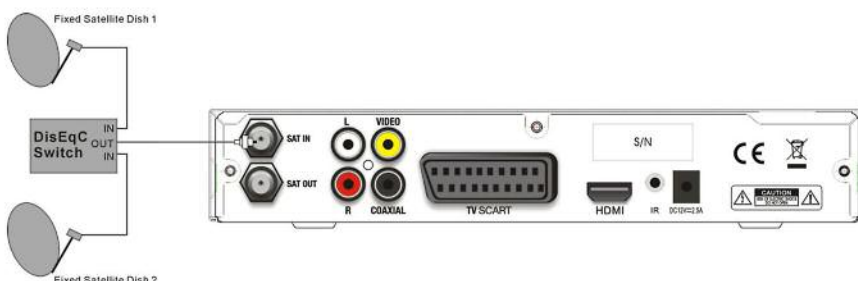

Connecting a dish on a motorized positioner to your receiver

 Another possibility to watch programs from multiple satellites is mounting a dish on to a motorized DiSEqC 1.2 positioner. Have your dealer mount the dish on the positioner, set the correct azimuth (angle of elevation) and set the center point for your positioner. Connect the LNB with a coax cable to the LNB IN connector of the positioner, and connect the OUT connector of the positioner to the LNB IN connector at the back of your receiver.

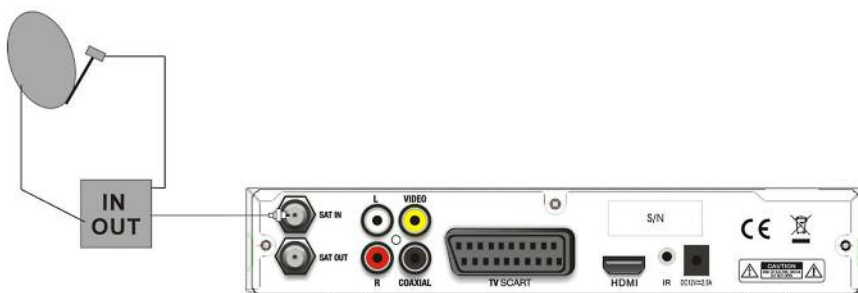

- Connect the terrestrial signal from the LNB to the LNB IN connector.
- Connect the SCART lead between the main SCART socket on the TV and the TV SCART socket on the receiver or Connect the TV using an AV cable.

- Connect to VCR with a SCART cable.
- Connect the S/PDIF connector at the back of your receiver to the suitable input of your Digital Audio
- Turn on the TV. Set TV to AV mode.
- Connect the STB's power cables into 12 Vdc power source (battery).
- Wait till when the display shows the message "Lock" and it is ready to select the program.

1.4 Remote

All the features of the set-top box can be controlled with the remote control unit.



: Switch between operation and standby modes

: Press to temporarily mute

0-9: To enter a number or select a channel number to watch

AV key: To toggle between TV and AV mode

TV/R: To switch between TV and Radio mode

MENU: To display the main menu

EXIT: To return to the previous menu or quit the item

OK: To confirm

: To move cursor up/down/left/right, page up/down, Volume +/-

FAV: Press to display the TV favorite list.

EPG: Shows the EPG (Electronic Program Guide) only when menu is off.

V+/V-: Volume+/-

AUDIO: To display the Audio Select window.

INFO: Shows information on the current channel

ZOOM: To magnify the picture.

P+/P-: Page up or down in menu list

SAT: To display the satellite list.

TEXT: Shows current service's Teletext on OSD.

SUB: Shows the list of subtitled languages supported by the current channel.

RCL: Switches to Last channel viewed.

: Pause.

: Play previous item.

: Play next item.

: Enter the media player menu.

: Play.

: Slow playing.

: Fast playing.

: Stop.

2. Main Menu

The STB contains a facilitated user interface; this function makes it easier for the user to recall all the device functions.

Operation Steps: Press **"MENU"**, you will display this main menu.



- If no menu is displayed on the screen, press the **MENU** key to display the main menu.
- When the menu is displayed on the screen, press the **MENU** or **EXIT** key to return to the top-level menu.
- **OK** key Press this key to go to the current sub-level menu item.
- **【▼▲】** key To move up and down.

3. Edit Channel

From the main menu, you can press UP or DOWN to select the **"Edit Channel"** icon.

From this menu, we can select **"TV Channel List"**, **"Radio Channel List"** and **"Delete All"** items.



3.1 TV Channel List

You can add channels to a favorite group, lock channel, skip channel, move channel and edit channel in the **“TV Channel List”** Menu



3.1.1 FAV

In **“TV Channel List”** menu, you can select channels by pressing the UP/DOWN key, then press the **“FAV”** key and **“OK”** key to enter the favorite group list, press UP/DOWN to select one favorite group, and press **“OK”** to confirm; press the **“EXIT”** key to add the channel to this favorite group.



3.1.2 Lock

In the **“TV Channel List”** menu, you can select a channel by pressing the UP/DOWN key, then press the **“RED”** key and **“OK”** key to lock this channel. Press **“OK”** again to cancel the lock. If the **“OK”** key is pressed again the selected channel is unlocked.



3.1.3 Skip

In the **“TV Channel List”** menu, you can select a channel by pressing the UP/DOWN key, then press the **“GREEN”** key and **“OK”** key to skip. Press **“OK”** again to cancel skipping.



3.1.4 Move

In the “**TV Channel List**” menu, you can select a channel by pressing the UP/DOWN key, then press the “**YELLOW**” key and “**OK**” key to mark it, and press the UP/DOWN key to move this channel to your chosen position.



3.1.5 Edit

In the “**TV Channel List**” menu, you can press the “**BLUE**” key to edit the channel list. In the “**Edit**” menu, you can sort, edit and delete channels.

- **Sort**

You can sort channels by pressing the “**RED**”key.

- **Edit**

You can rename channels by pressing the “**GREEN**” key.

 
- **Delete**

You can delete channels by pressing the “**BLUE**” and “**OK**” keys.



3.2 Delete All

In the “**Edit Channel**” menu, press the UP/DOWN key, select “**Delete All**”, and press the “**OK**” key, then choose to delete all channels.

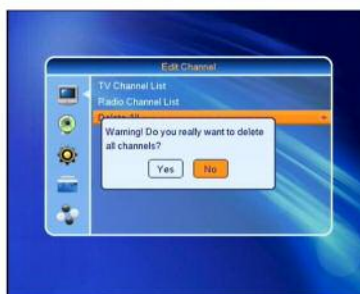

4. Installation

From the main menu, you can press the UP or DOWN key to select the “**Installation**” icon. From this menu, we can select “**Antenna Connection**”, “**Satellite List**”, “**Antenna Setup**”, “**Single Satellite Search**”, “**Multi Satellite Search**”, “**TP List**” and “**Other**”.



4.1 Antenna Connection

From the “**Installation**” menu, you can select the “**Antenna Connection**” menu.

The user can select the antenna connection mode.



4.2 Satellite List

From the “**Installation**” menu, you can select the “**Satellite List**” menu.

In this menu, you can select and edit the satellites.



- **Edit**

Press the UP or DOWN button to select one satellite, press the **RED** button to enter the “**Edit Satellite**” menu, press a numeric key to enter the new name.

- **Add**

Press the **GREEN** button to add a new satellite.

- **Delete**

Press the **BLUE** button to delete a selected satellite.



4.3 Antenna Setup

From the “**Installation**” menu, press the **OK** button on Antenna Setup to display this window.

Satellite: If you press **OK** in Satellite, the satellite list is displayed. Move the cursor to a satellite and press **OK** to select the satellite.

LNB Freq: To change LNB Frequency.

Transponder: To change the transponder.

DiSEqC1.0: The default setting is Disable.

You can select Port1~Port4

22k: The default setting is Auto.

Polarity: To change the Polarity.



4.4 Single Satellite Search

In this menu, you can select one satellite and set **FTA Only**, **Scan Channel** and **Scan Mode** to search channels only on the selected satellite.



4.5 Multi Satellite Search

In this menu, you can set **FTA Only**, **Scan Channel** and **Scan Mode** to search channels on multiple satellites.



4.6 TP List

In this menu, you can edit the transponders, add transponders, delete transponders, and search channels with the selected transponder.

- **Edit**

Press the UP or DOWN key to select one transponder, press the **RED** key to edit it by setting **Frequency**, **Symbol Rate** and **Polarity**. After setting, select “**Save**” and press **OK** to save the operation, select “**Cancel**” and press **OK** to cancel the operation.



- **Add**

You can press **GREEN** key to add transponders by setting **Frequency**, **Symbol Rate** and **Polarity**. After setting, select “**Save**” and press **OK** to save the operation, select “**Cancel**” and press **OK** to cancel the operation.

 


- **Delete**

Press the UP or DOWN key to select one transponder, press the **YELLOW** key to delete it.

- **Search**

Press the UP or DOWN key to select one transponder, press the **BLUE** key to search channels by setting **FTA Only**, **Scan Channel** and **Network Search**.

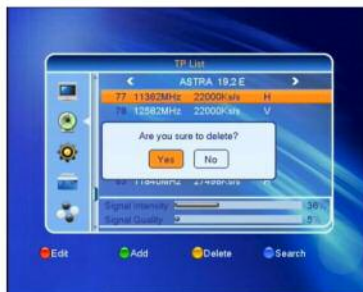

4.7 Fast Scan

Select operator: it is possible to choose between Canal Digitaal, TV Vlaanderen, Telesat.

Select Sub List: channel list in HD (HD zenderlijst) or in SD (SD zenderlijst).

Start Scan: you start the selected scan.



5. System Setup

From the main menu, you can press the UP or DOWN key to select the **“System Setup”** icon. From this menu, you can select **“Language”**, **“TV System”**, **“Display Setting”**, **“Local Time Setting”**, **“Timer Setting”**, **“Parental Lock”**, **“OSD Setting”**, and **“Favorite”** items.



5.1 Language

You can set Language, First Audio language, Second Audio language and Teletext language.



5.2 TV System

You can set Video Resolution, Aspect mode, Video Output and Digital Audio Output.



5.3 Display Setting

You can set Brightness, Contrast and Saturation.



5.4 Local Time Setting

You can set your STB's time. This function is useful for EPG and some timer functions. If a broadcaster provides GMT, you can set the time using GMT or set your own time by yourself. If the **"GMT usage"** is set to **"Off"**, you can only set Date and Time. If you set **"GMT Usage"** to **"On"**, you can select **"GMT Offset"** and set **"Summer Time"** to **"On"** or **"Off"**.



5.5 Timer Setting

You can set the timer to make the receiver perform designated actions including timer based wake up or sleep instructions to the set-top-box. Use the **UP/DOWN** buttons to select timer. Press the **OK** button to enter your selected timer settings.

You can set it as follows:



Timer Mode: To select the timer mode, Once, Daily or Off.

Timer Service: To select timer service, Channel or Record.

Wakeup Channel: To select the wakeup channel of the timer action.

Wakeup Date: To set the date of the timer action.

On Time: To set the time of the timer action.

Duration: To set the duration time.

5.6 Parental Lock

In “**Parental Lock**” menu, you can set **Menu Lock**, **Channel Lock** and change the password.



5.7 OSD Setting

You can set OSD Timeout and OSD Transparency.



5.8 Favorite

You can select the favorite group and press “**OK**” key to rename it.

5.9 Other

In this menu, you can set LNB Power (On or Off), LNB Standby Loop (On or Off), Channel Play Type (All, Free or Scrambled) BER (On or Off) and Auto Standby.



Auto Standby: You can set the Auto Standby time. After the set time, the receiver will go to standby mode.

6. Tools

From the main menu, you can press the UP or **DOWN** key to select the “Tools” icon. From this menu, you can select the “**Information**”, “**Factory Setting**”, “**S/W Update by OTA**”, and “**Update by USB**” items.



6.1 Information

From the “**Tools**” menu, you can select the “**Information**” menu. In this menu, you can view the HW version and SW version.



6.2 Factory Setting

You can restore factory settings by selecting “**Load Factory Setting**” and pressing the “**OK**” key. Select “**Yes**” and press the “**OK**” key to confirm; select “**No**” and press the “**OK**” key to cancel.



6.3 SW Update by OTA

From the “**Tools**” menu, you can select “**SW Update by OTA**” menu. In this menu, you can upgrade software by setting **Satellite**, **Transponder**, **Frequency**, **Symbol Rate**, **Polarity** and **Download PID**. After setting completion, you can select “**Start**” and press “**OK**” to start software update.



6.4 Update by USB

You can control “**Software Update**” by USB.



6.5 Media Player

In this menu, you can play music and set up the media player.



6.6 Remove USB device safely

Select this item and press **OK** key to remove an USB device safely.

7. Game

There are two games in this menu (**Othello** and **Sudoku**), you can play them following the instructions.



8. Other functions introduction

8.1 Program information

If you press the INFO button once, a banner is displayed on the screen, and if you press the button again while the banner is still displayed, the banner will show the record list.



8.2 Favorite List

If you press “FAV” on the remote controller and you are not inside the menu, the favorite group list will be displayed on the screen. You can select one favorite group and press “OK” key to enter the favorite channel list.



 
8.3 Program Guide

EPG shows the event information for the current channel by time zone.

Move the cursor to an event in the required time zone, and press the “RED” key. You can view the EPG for the week.

Move the cursor to an event in the required time zone, and press the “BLUE” key. Then the timer is set to the designated time.



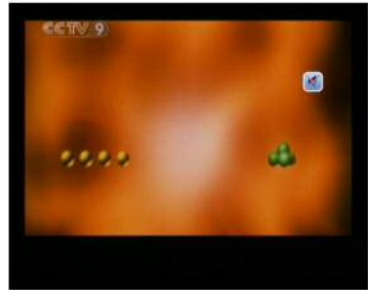

8.4 Volume Control

- Adjust volume: Press the “Left/right” key on the remote control when you are not inside the menu.
- Mute: Press the “Mute” key on the remote control at No menu state

9. Technical Specifications

Tuner & Channel Decoder

Input/Loop through	Connector F-type, IEC 169-24, Female
Frequency Range	950 ~ 2150MHz
LNB Power & Polarisation	Vertical : +13.5±VDC Horizontal: +18.5±VDC Current : Max.500mA with Overload Protection
22KHz	Tone Frequency : 22±1KHz Amplitude : 0.65±0.2V
Demodulation	DVBS QPSK, DVBS2 QPSK, DVBS2 8PSK
Input Symbol Rate	DVBS 1...45 Msps DVBS2 1~30Mbps
Code Rate	1/2, 2/3, 3/4, 5/6 ,7/8 and 9/10

MPEG Transport Stream A/V Decoding

Transport Stream	ISO/IEC 13818-1 MPEG-2, H.264/AVC Transport stream Specification
Profile Level	MPEG-2 MP@ML, MP@HL, MPEG-4 H.264/AVC
Aspect Ratio	4:3, 16:9
Video Resolution	576i, 576p, 720p, 1080i
Audio Decoding	MPEG-1 Layer 1 & 2, Dolby Downmix, Dolby AC3, Dolby Digital Plus(DD+)

Main System

Main Processor	ALI M3606
----------------	-----------

A/V & Data In/Out

HDMI HD	Video/Audio Output
---------	--------------------

TV Scart	Video CVBS/RGB, Audio L/R output
S/PDIF	COAXIAL
RCA A/V	Video CVBS output Audio L/R output
USB	USB2.0 Host

Conditional Access Interface

PCMCIA	no
--------	----

Front Panel

Key	one power button
LED	7 segment 4 digit LED Display

Power Supply

Input Voltage	100~240VAC, 50/60Hz
Type SMPS	Power Consumption
Running:	Max. 8W when LNB Off, Standby: Max 2W with clock showing on LED display

10. Troubleshooting

T

here may be various reasons for the faulty operation of the receiver. Check the receiver according to the procedures shown below. If, after checking the receiver, the problem persists, contact the dealer. Do not open the receiver cover. This may be a source of danger.

Problem	Possible causes	What to do
Display on front panel does not light up	The power cord is not plugged in.	Check that the power cord is plugged in to the wall outlet.
No picture or sound	Wrong connection of the Audio/Video output of the receiver to TV. Audio muting. TV power off.	Connect the Audio/Video output of the receiver to TV correctly. Press the Mute button. Turn TV on
No picture	The receiver can't receive the signal Incorrect values of some tuner parameters. Wrong pointing of the dish	Check the antenna cable, replace the cable, or connect the cable to the receiver tightly. Set the values of tuner parameters correctly in installation menu. Check the signal strength with a spectrum analyzer and adjust your dish correctly
The remote control does not work	The batteries of the remote control are not inserted or are flat	Check whether the batteries are inserted correctly in your remote control. Check the battery charge, and replace the batteries in the remote control if necessary.



Tips: If, after this troubleshooting, the experienced problem has not yet been solved, please contact your local dealer or technical support centre immediately; do not open the machine enclosure, because doing so is very dangerous and could damage the machine.



CONFORMITY CERTIFICATE

The manufacturer Teleco Spa

Via Majorana nr. 49, 48022 Lugo (RA)

Declares under its own responsibility that the following products:

FORCE HD CI+

which are the subject of this certificate, conform to the following norms

EN 60065: 2002

EN 55013: 2001 + A1: 2003

EN 61000 – 3 - 2: 2000 + A2: 2500

EN 61000 – 3 – 3: 1995 + A1: 2001 + A2: 2005

EN 55020: 2002 + A2: 2005

according to the terms of the European directive 2006/95/EC

Low Voltage (modified by 93/68/CEE) and 2004/108/CEE
of Electromagnetic Compatibility (modified by 92/31/CEE e 93/68/CEE)
of the European Parliament.

Lugo 16 / 03 / 2015

THE PRESIDENT

Ing. Raul Fabbri



Group
TELECO



TELECO SPA
ITALY

Via E. Majorana 49
48022 LUGO (RA)
Tel. + 39 0545 25037
Fax. + 39 0545 32064
mail: info@telecogroup.com
www.telecogroup.com
Assistenza 899 899 856

TELECO GmbH
DEUTSCHLAND

82041 Deisenhofen
Tel. 08031 98939
Fax 08031 98949
telecogmbh@telecogroup.com
www.telecogroup.com

TELECO SCS
FRANCE

3, Impasse des Iles
ZA La Maladière
07300 St Jean de Muzols
mail: contact@telecogroup.fr
www.telecogroup.fr

Telair SRL
ITALY

Via E. Majorana 49
48022 LUGO (RA)
Tel. + 39 0545 25037
Fax. + 39 0545 32064
mail: telair@telecogroup.com
www.telecogroup.com

IN EUROPE:

GREAT BRITAIN - SCAN TERIEUR LTD
30, The Metro Centre, Tolpits Lane - Watford,
Herts - England - WD18 9XG
Tel. 01923 800353 - Fax 01923 220358
e-mail: info@scan-terieur.com
www.scan-terieur.com

THE NETHERLANDS/BELGIUM/LUXEMBOURG/DENMARK/SWEDEN
KARMAN TRADING
Tel. +31 (0) 341 722450 - Fax +31 (0) 341 722451
e-mail: info@karmantrading.eu
www.karmantrading.eu

FRANCE - TELECO SAS
3, impasse des Iles - ZA La Maladière
07300 St Jean de Muzols - France
Tél. 04 75 08 49 17 - Fax 09 70 32 83 00
contact@telecogroup.fr
www.telecogroup.fr

SERVICE COMMERCIAL :

Jean-Philippe Bleyes
Tél. 02 48 58 03 67 Fax 02 48 58 35 85
teleco.telair@bleysetd.com

Service Technique :

Tél. 06 83 31 44 05 ou 04 75 08 28 25
www.techmobilefrance.com

ESPAÑA - ADD SICMAP S.L.
EVA Caravan - Via Sergia 92 - Pol. Ind. Pla d'en Boet II
08302 MATARÓ (Barcelona)
Tel. 93 790 35 26 - Fax. 93 796 21 17
info@addsicmap.com

Servicio técnico: Fills de Rocha i Lopez, S.L.- C/Goya,4
08903 L'Hospitalet de Llobregat - Barcelona - España
Tel. 933 333 753 - Fax 933 337 236
fillsrocha@fillsrocha.com

ÖSTERREICH - TELECO GmbH
82041 Deisenhofen - Deutschland
Tel. 0049 8031 98939 - Fax. 0049 8031 98949
telecogmbh@telecogroup.com
www.telecogroup.com
SERVICE 0900 94 94 70

DEUTSCHLAND - TELECO GmbH
82041 Deisenhofen - Deutschland
Tel. 08031 98939 - Fax 08031 98949
telecogmbh@telecogroup.com
www.telecogroup.com
VERTRETUNG:
Zimmer - Technik für Mobile Freizeit
Raiffeisenstr. 6 - 64347 Griesheim
Tel. 06155 797873 - Fax 06155 797871
info@zimmer-mobilttechnik.de
SERVICE 0892112997



Kundendienst beim
ausgewählten
Bosch Service!



[www.facebook.com/pages/
Telcogroup/213241202111442](http://www.facebook.com/pages/Telcogroup/213241202111442)

Foto e disegni non contrattuali - Les photos et les dessins ne sont donnés qu'à titre
indicatif - We reserve the right to make technical changes without prior notice -
Fotos und Zeichnungen nicht vertraglich - Foto's en tekeningen niet contractueel -
Fotos y planos no indicados en contrato